



# HS-7A-2AW

- ※ Read instructions thoroughly before proceeding.
- ※ Tighten all parts by hands. Don't use power tool.
- ※ For your safety, please do not overload.
- ※ For pneumatic wheel: Please check air pressure in tires. Maintain (30) PSI.

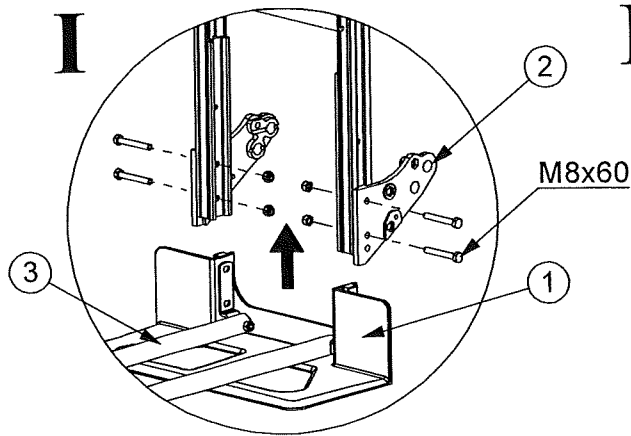


Please follow → direction for assemble.  
 ① nose plate ② axle boxes  
 ③ extension nose plate then tight them.

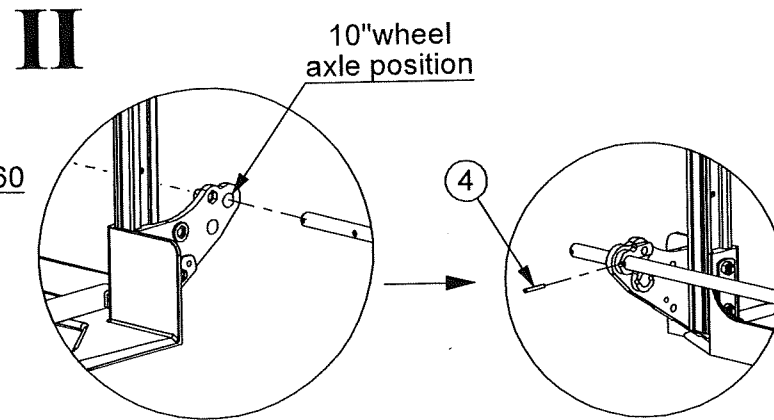


Assemble the axle

insert ④ spring pins.

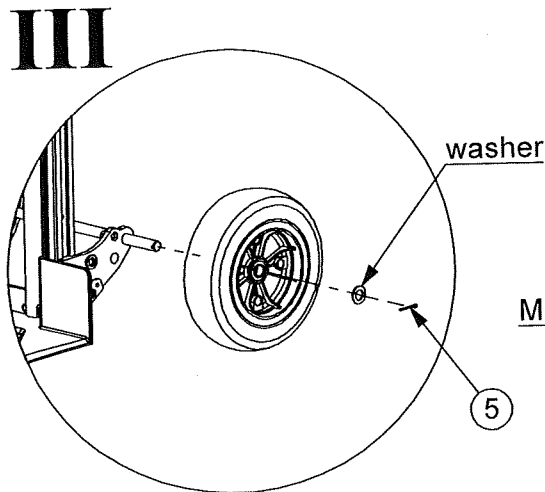

Insert washer, wheels in each side, and put the ⑤ cotter pins. Please bend the cotter pins.

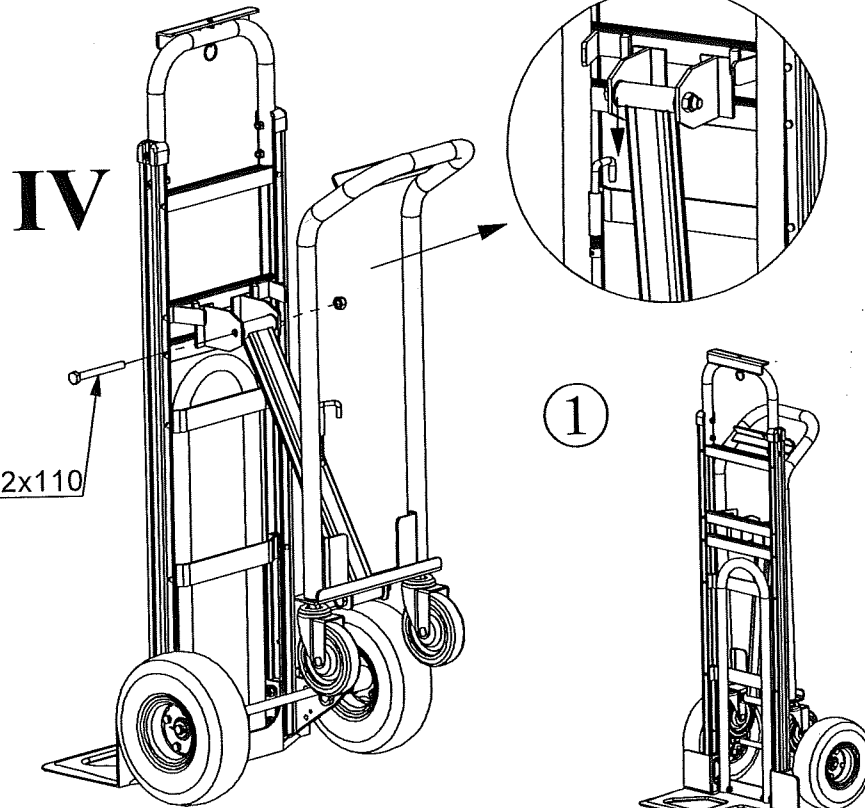

Locking screw.

