

# Step by Step Installation Instructions for Installing your Turn@bout®

You will need the following tools for installation

- Power Drill
- Tape Measure
- Pencil




Installation Kit Includes: Turn@bout®, drill bits, hex wrench and template for drilling holes.



Turn@bout®

Patented &  
Pat. Pending

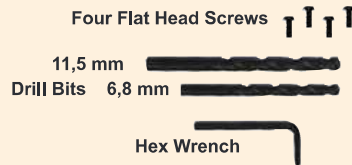

Template

## Step 1: Measure & Mark


Raise pallet jack to full height.

Measure X from back of pallet jack, and mark both forks.

$X = \text{length of fork} \times 0,43$

Examples for X for different fork length

900 mm = 387 mm, 1000 mm = 430 mm, 1150 mm = 495 mm


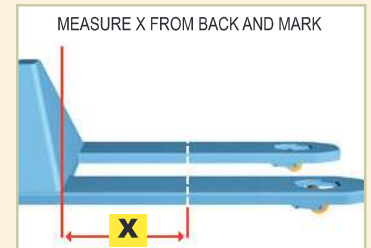


## Step 2: Attach Template

Align side of template with mark as shown.

Place template flat on top of fork and

slide to outside edge.

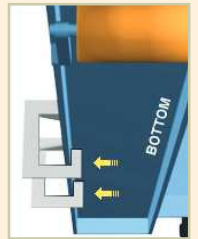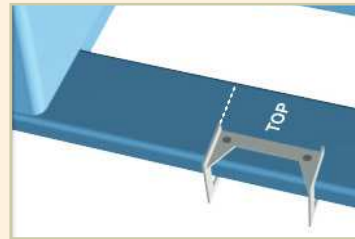

## Step 3: Drill Holes

Hold template firmly in place.


Drill pilot hole with the smaller drill bit.

Temporarily drop-in one screw to help keep template in place.

Drill second pilot hole.

Remove Template.

Then use the larger drill bit to enlarge the holes to countersink the screw.

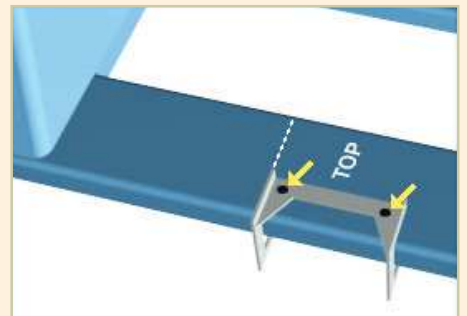


## Step 4: Install

Place Turn@bout® as shown and install screws.

Press up on rear of the Turn@bout® to make sure that it is straight and moves freely.

Repeat all steps for other side/fork.

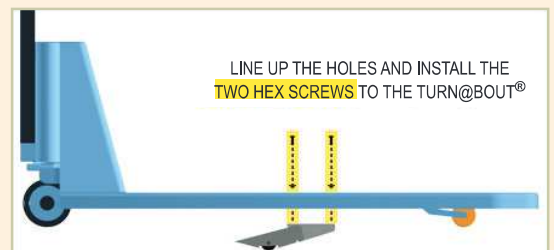

## Installation Complete

Place Turn@bout® labels onto handle of pallet jack.

You are done! Enjoy the increased maneuverability by 72%. And no more wide turns or having to kick or wrestle the pallet jack into position.



Visit [www.turnabout.eu](http://www.turnabout.eu) for photos and more information

